

PMW6XXX

7" to 32" Widescreen Open Frame LCD Monitors
Bare Metal Enclosure with Front Mounting Holes
LCD Monitor OSD Operation - VGA + HDMI + DVI

OSD User Manual

LCD Monitor OSD Operation for VGA + HDMI + DVI

Contents

< Part. 1 > LCD Monitor OSD Operation

1.1	Control Functions	P.1
1.2	Description	P.1

< Part. 2 > Adjusting the Monitor

2.1	Adjustment Procedure	P.2
2.2	Color	P.2-3
2.3	Contrast	P.3
2.4	Brightness	P.3
2.5	Color Adjust	P.4
2.6	Color Temp	P.4
2.7	Image Setting	P.5
2.8	OSD Setting	P.5
2.9	Signal Source	P.6
2.10	Audio Setting	P.6
2.11	Special Setting	P.7

< Part. 1 > LCD Monitor OSD Operation

1.1 CONTROL FUNCTIONS

The Monitor control functions are located on the lower side of the panel. The control key description :

MENU	:	Activate the on-screen-display function
▽	:	Down / Brightness control
△	:	Up / Brightness control
Auto	:	AUTO-ADJUSTMENT / TURN OFF THE OSD
⏻	:	Power Switch

1.2 DESCRIPTION

1. Menu

Press the Menu key to activate the on screen display screen. It is a toggle key. Press Auto key to turn off the OSD. After 30 sec. idle time, the OSD screen will automatically turn off.

2. ▽ & △ : Select key

The two keys have two sets of functions:

- When OSD screen is not activated, the two keys are used to adjust the Backlight.
- When OSD screen is activated (When "Menu" key is pressed), the two keys are used to select the wanted adjustment items

3. Auto

Press Auto Key to get the optimized quality.

4. ⏻ : Power switch

Use the power switch to turn ON or OFF power. We recommend turning your system power on first, then the LCD monitor.

5. Lock OSD : Push and hold the MEUN and Down button

Display ICON will show OSD

Release Lock OSD : Push and hold the MEUN and Down button


Display ICON will show OSD UNLOCK

< Part. 2 > Adjusting the Monitor

The LCD monitor is designed to work with a range of compatible video adapters on the market. Due to the possible deviations between these video adapters, you may make some adjustment to fit the monitor for adapter used.

2.1 ADJUSTMENT PROCEDURE


First, you must activate the OSD screen through pressing the MENU key, the screen will show in the center of screen as below:

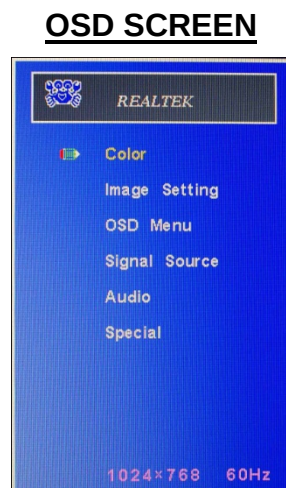

- Use the ▾ & ▴ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

2.2 COLOR

- Use the ▾ & ▴ key to select the Color item, then press Menu Key to get the Color menu item selection.

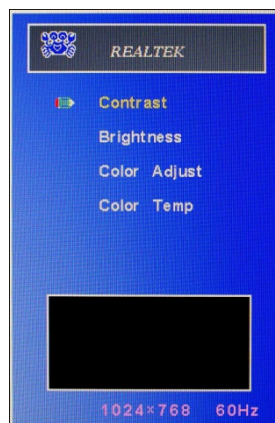

- Use the ▽ & △ key to select the required adjustment item up or down. Press Menu key to do the further change. Press ▽ & △ key to adjust values.
- Press Auto key back to the last menu.

2.3 CONTRAST

- Select the Contrast item and Press Menu Key to do the further change. Press ▽ & △ key to adjust values.
- Press Auto key back to the last menu.




2.4 BRIGHTNESS

- Select the Brightness item and Press Menu Key to do the further change. Press ▽ & △ key to adjust values.
- Press Auto key back to the last menu.




2.5 COLOR ADJUST

- Select the Color Adjust item and Press Menu Key to get into selection. Press ▽ & △ key to select Red, Green & Blue item.
- Then press Menu Key to do the further change. Press ▽ & △ key to adjust value.
- Press Auto key back to the last menu.

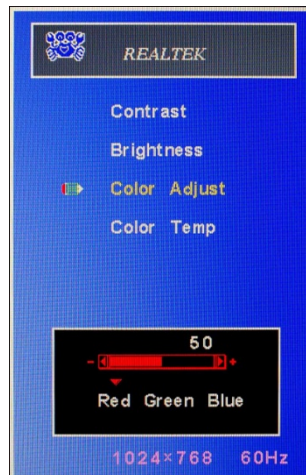

2.6 COLOR TEMP


- Select the Color Temp item and Press Menu Key to get into selection. Press ▽ & △ key to select 9300, 6500, 5800, sRGB, & USER.
- Press Menu Key to do the further change.
- Press Auto key back to the last menu.

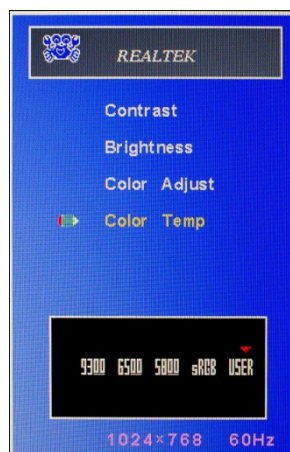

2.7 IMAGE SETTING


Clock / Phase / Sharpness / H.Position / V.Position

- Press Menu Key back to the tool bar
- Use the ▽ & △ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

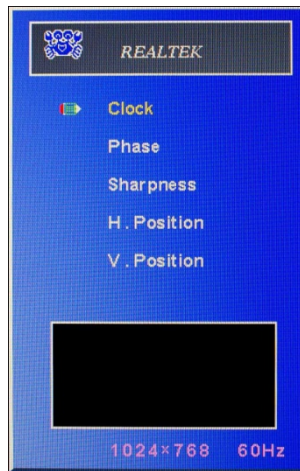


2.8 OSD SETTING

- Press Menu Key back to the tool bar
- Use the ▽ & △ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

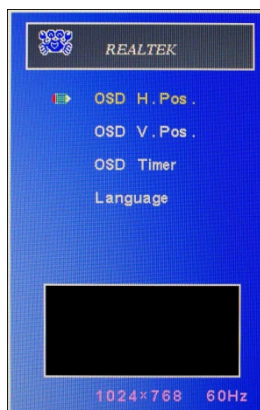


2.9 SIGNAL SOURCE

- Press Menu Key back to the tool bar
- Use the ▽ & △ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

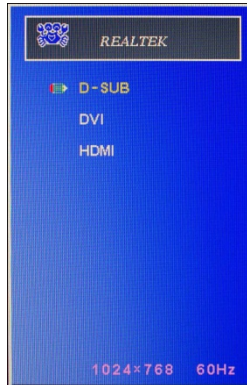

2.10 AUDIO SETTING

- Press Menu Key back to the tool bar
- Use the ▽ & △ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

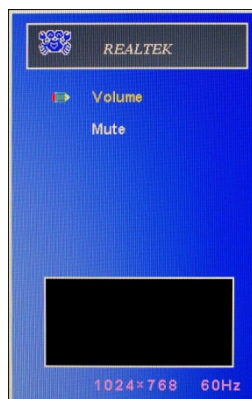

2.11 SPECIAL SETTING

- Press Menu Key back to the tool bar
- Use the ▽ & △ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Press Auto key to turn off OSD. Or after 30 sec. idle time, the OSD screen will automatically turn off.

